

1. Open up any browser e.g. Internet Explorer, Mozilla Firefox of Google Chrome. In the address bar, type 192.168.20.1 then press Enter.

Username: admin password: admin (or your wifi password)

2. Click on Management > Access Control > Services Control > Put a tick mark on enable under WAN & HTTP as seen on the screenshot below then click on Apply.

NetComm Wireless					
NF10WV	Access Cor Services acc	ntrol Servi	ices it (SCL) enab	le or disable	the running services.
Device Info Basic Setup Advanced Setup Wireless Voice	Services	LAN	WAN	Port	
	нттр	🕑 enable	🕑 enable	80	
	TELNET	🖉 enable	enable	23	
Diagnostics	SSH	🖉 enable	enable	22	
Settings	FTP	🖉 enable	enable	21	
System Log Security Log	TFTP	🕑 enable	enable	59	
SNMP Agent TR-069 Client	ICMP	🖉 enable	🔲 enable	0	
Internet Time Access Control	SNMP	🕑 enable	enable	161	
Passwords Services Control	SAMBA	🕑 enable	enable	445	
Update Firmware Reboot Logout				•	Apply/Save