

- Access Netcomm router configuration using a web browser (Internet Explorer, Google Chrome or Firefox). In the address bar, type <u>http://192.168.20.1</u>
- A windows pop-up will come up asking the username and password

Username: admin Password: admin (or your wifi password)

Status	N300 WiFi Gigabit Router with Voice						
ogin	Username						
	Password						
		Login	Clear				



• Select No thanks, take me to the Basic interface.





• Set the WAN type to PPPoE then put your username and password then Save.

S	WAN Setup				
Statu	WAN type:	PPP over Ethernet			
	Username				
8	Password				
Wirelee	Enable Automat	ic 3G backup Save and apply the changes			
WAN Mobile Broadband	Please note:	Saving these settings will change your primary connection type to Ethernet WAN.			
:	Switch to advanced vie	w			



• Click Switch to Advanced View.





- The instructions below will help configure your router for remote access.
- Go to Security Settings > Miscellaneous

Status	Network Setup	Forwarding Rules	Security Settings	Advanced Settings	VoIP Setting:	s NAS Settings	►Toolbox
			Status				
			Packet Filters				
📕 IPv4	System Status		Domain Filters				
ltem		URL Blocking	Status		Sidenote		
		MAC Control	510103		Sideliole		
	IP Address		Miscellaneous	0.0.0.0		3G	
	Subnet Mask			0.0.0.0			
	Gateway			0.0.0.0			
	Domain Name Serv	ver	0.	0.0.0 , 0.0.0.0			

Status	► Network Setup	Forwarding Rules	► Security Settin	gs ►Advanced Settings	►VoIP Settings	▶ NAS Settings	►Toolbox
1.0	II	tem			Setting		Enable
Adr	ninistrator Time-out			300 seconds (0 to disa	ible)		
Rei	note Administration			0.0.0.0 / 0	: 8080		
Dis	card PING from WAN side						

Do the following:

- Set the Administrator time out to 300
- Tick on Enable
- Set Remote Administrator to: 0.0.0.0 / 0 : 8080
- Click on Save settings