


- Open up any browser e.g. Internet Explorer, Mozilla Firefox or Google Chrome. In the address bar, type 192.168.20.1 then press Enter.


Username: admin

Password: admin (or your wifi password)


- Click on **Basic Setup** then **choose > VDSL** then click **Next**

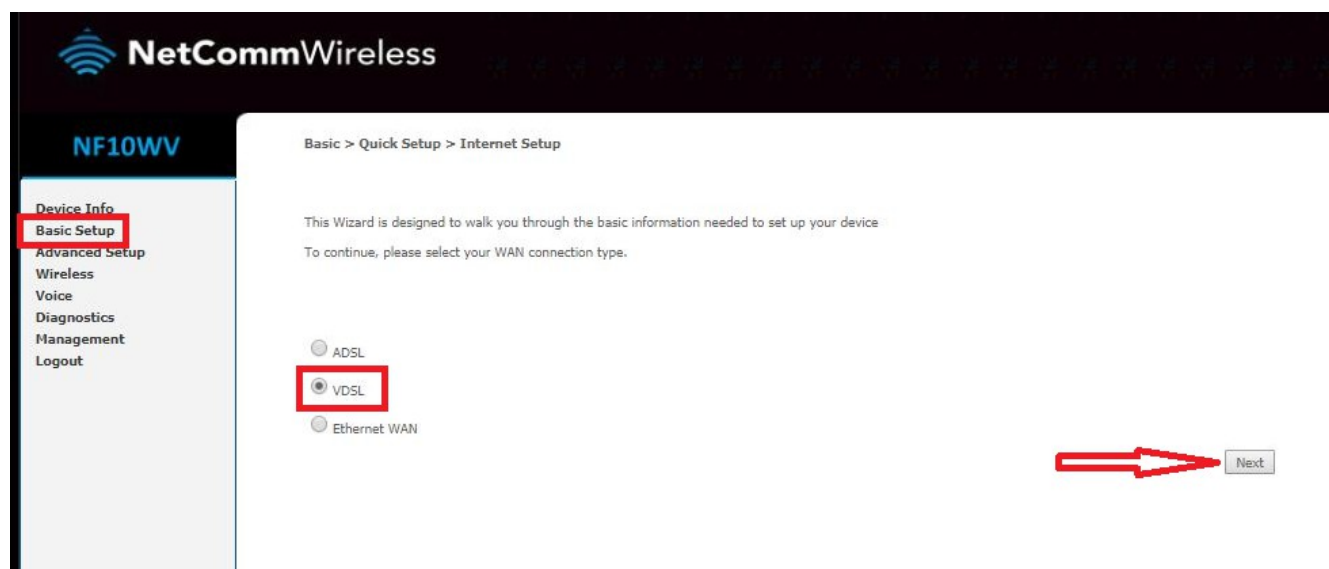

- Choose **PPP over Ethernet**

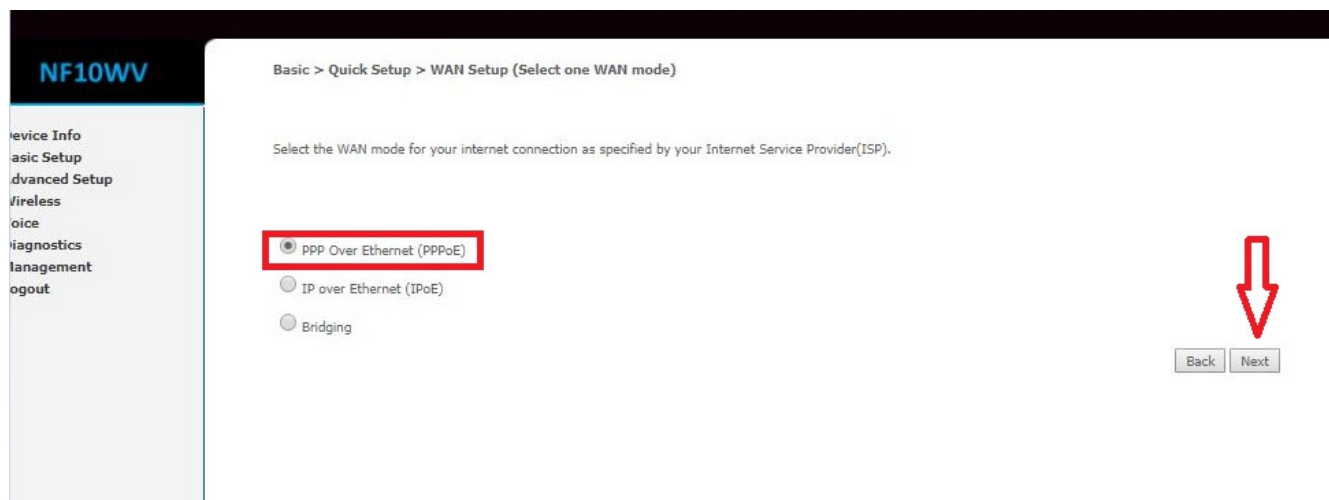


- Select **Custom VLAN Tag** then Key in **100**

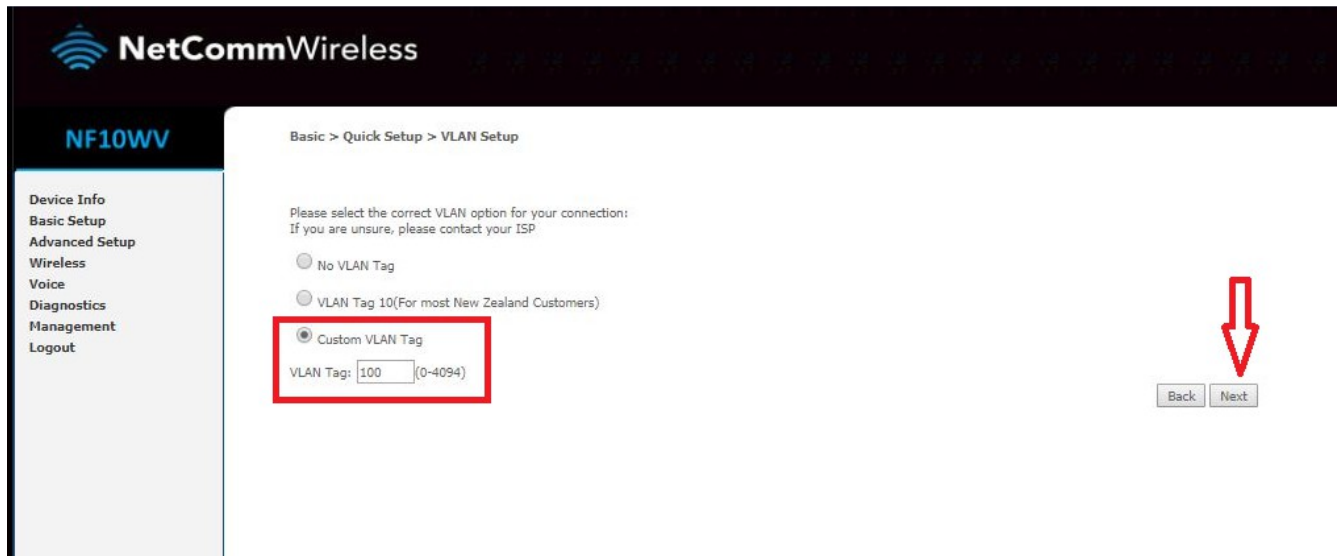

The screenshot shows the NetCommWireless web interface. The breadcrumb trail is "Basic > Quick Setup > VLAN Setup". The main heading is "NF10WV". The left sidebar contains a menu with "Device Info", "Basic Setup", "Advanced Setup", "Wireless", "Voice", "Diagnostics", "Management", and "Logout". The main content area has the text: "Please select the correct VLAN option for your connection: If you are unsure, please contact your ISP". There are three radio button options: "No VLAN Tag", "VLAN Tag 10(For most New Zealand Customers)", and "Custom VLAN Tag". The "Custom VLAN Tag" option is selected and highlighted with a red box. Below it is a text input field for "VLAN Tag" containing the value "100" and a range "(0-4094)". To the right of the input field is a red arrow pointing downwards towards the "Next" button. At the bottom right are "Back" and "Next" buttons.

- Type your Clear Networks login credentials then click on **Finish**

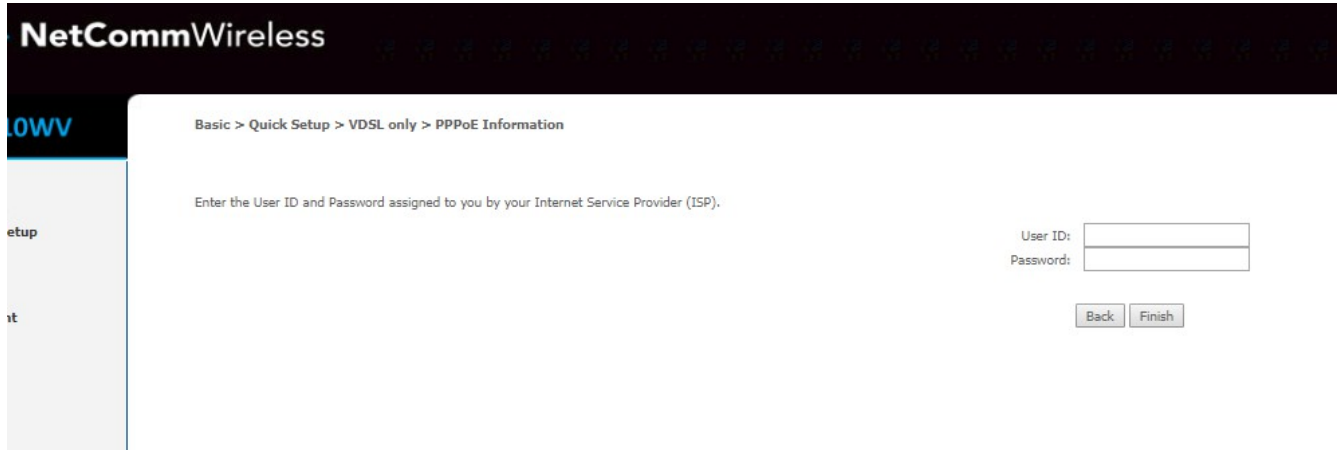

The screenshot shows the NetCommWireless web interface. The breadcrumb trail is "Basic > Quick Setup > VDSL only > PPPoE Information". The main heading is "NF10WV". The left sidebar contains a menu with "Device Info", "Basic Setup", "Advanced Setup", "Wireless", "Voice", "Diagnostics", "Management", and "Logout". The main content area has the text: "Enter the User ID and Password assigned to you by your Internet Service Provider (ISP)". There are two input fields: "User ID:" and "Password:". Below the input fields are "Back" and "Finish" buttons.